

## **ASSEMBLY OF FRAME:**

**Note:** Bantam and Big Inch frame consists of 8 pieces, 4 bottom and 4 top. Giant frame consists of 12 pieces, 6 bottom and 6 top.

- 1 – Insert B7 (top) into B5 (bottom) at welded clip. Secure with 1 1/4" bolts. Swing side braces up into position. See Figure 1. Do not tighten bolts.
- 2 – Tip joined sections of the tops & bottoms on end and inset the two hinge pins. This completes the first half of the frame. Repeat procedure for the remaining sections.
- 3 – Stand the two tent frames on their feet, placed end to end and join together with assembly clips, 4 on each side: top, bottom and centers. See Figure 2.
- 4 – Tighten all bolts.
- 5 – Giant units require 3 sections.
- 6 – You are now ready to lace on the canvas.

## **ASSEMBLY OF COVER:**

**Note:** Covers consist of 2 side panels which are universal. Ends are quarter sections – one right and one left half end.

- 7 – Cover 1<sup>st</sup> side. Lay frame on the floor, feet together. (Like a big clamshell)
- 8 – Stretch cover over frame & hold into position with tie straps at top & bottom.
- 9 – With 1/8" rope provided, lace top of side cover to frame. Lace on end of the quarter sections.
- 10 – Tie one end of rope to the corner of opposite frame. Lace down through first grommet on side cover, through first grommet on end section, around the pipe out the adjacent grommet on end section then a half hitch around the rope & repeat this procedure for the entire end. See Figure 3.
- 11 – Lace other end and bottom side cover.
- 12 – Turn entire frame over and repeat this procedure for the other side.

Fig. 1


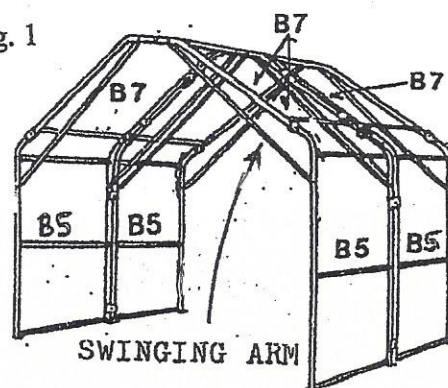


Fig. 2

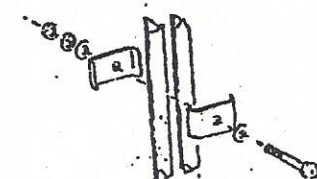

### **ASSEMBLY CLAMP**

8 Req'd for Big Inch & Bantam  
20 Req'd for Giant

**Note:** Total Enclosure Requires  
Ends w/Zipper Doorways

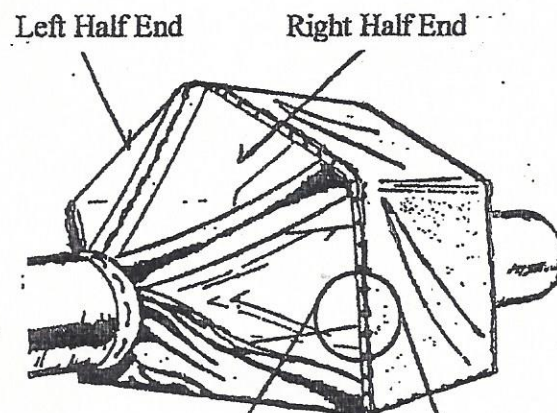


Fig. 3

